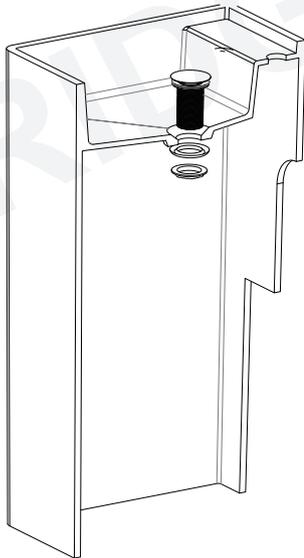# INSTALLATION INSTRUCTION

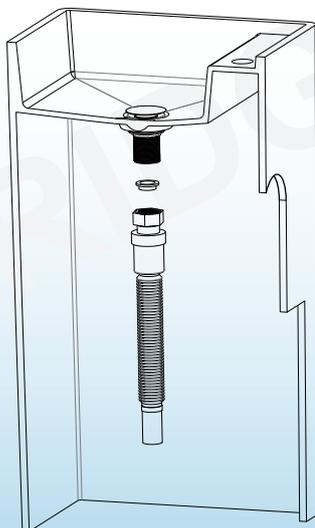# WOODBRIDGE®

BEFORE INSTALLATION

CAUTION:

- **Shut off the water supply line. If the sink doesn't have its own water shut-off valve, shut off the water valve for your whole home. Drain standing water from the hot and cold lines into a bucket.**
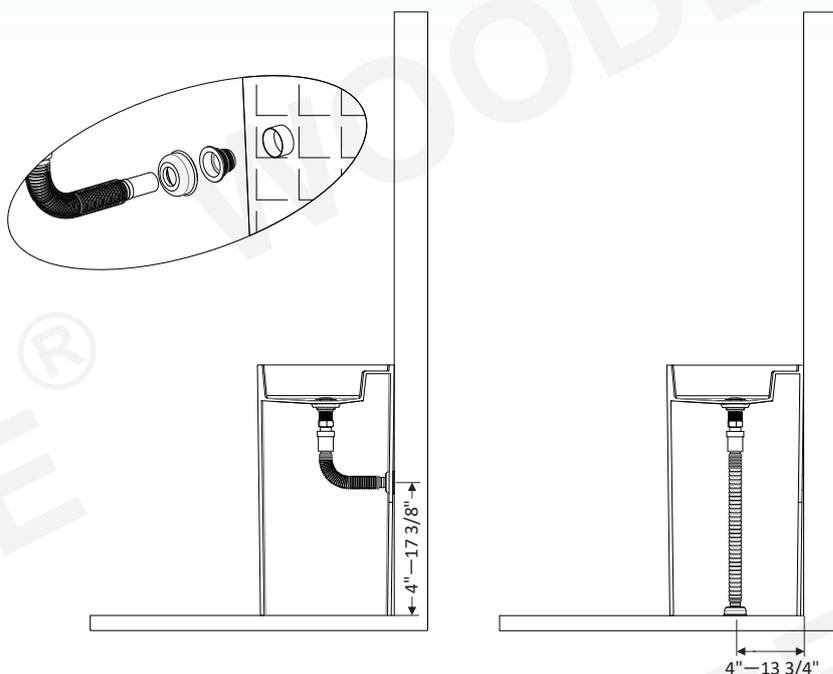
(1) Install the drain on the pedestal sink. Insert the drain from top of the sink, place rubber gasket and mounting lock nut from the bottom of the drain and hand tighten the lock nut.
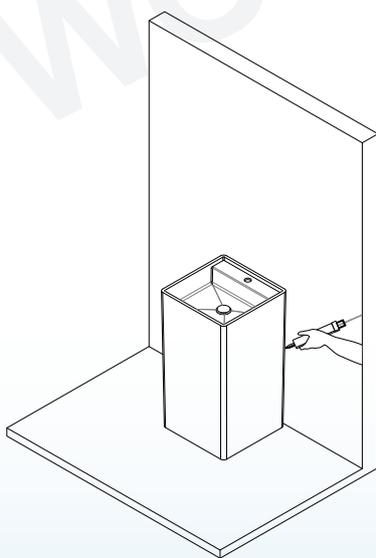

(2) Connect flexi hose drain to the drain assembly as drawing.

(3) Insert the other end of the drain tube and cap to waste outlet on wall/floor.

4"—17 3/8"

4"—13 3/4"

(4) Place the pedestal sink against the wall, put a level on top of the sink and make sure it is level and stable, any minor adjustment if necessary. Apply a beard of silicone caulking around the edge of the pedestal sink and let it dry.

MAINTENANCE TIPS:

(1) If your pedestal sink develops minor scratches, they may be removed by scrubbing gently with fine grit sandpaper, a soft brush or non-abrasive sponge and cream cleaner.

(2) In addition, if the minor scratches remaining after above step or you would like to polish the area in question to its original finish, you may perform following procedure.

WOODBRIDGE®

1. Clean the surface with water and make sure no dust remains.
2. Using water, polish the area starting with 800 grit sandpaper then final with 1000 grit sandpaper.
3. Wipe up remaining wax with clean dry cloth.

DAILY CARE:

Do's:

• **Use warm water to clean the sink and pedestal, wipe up the water with clean and soft dry cloth after use, this will maintain the tub finish and look as new.**

Don'ts:

• **Do not use any abrasive cleaners, cleaners containing acid, alkaline, ammonia or solvents which will cause damage in the surface.**

• **Do not expose the surface to hair dye or nail varnish as this may cause stains.**

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time) Or Email: help@woodbridgebath.com

www.woodbridgebath.com